
# Three phase string inverters

# **ASW LT-G2 Pro Series**

# **User Manual**

ASW 3K / 4K / 5K / 8K / 10K / 12K / 13K / 15K / 17K / 20K-LT-G2 Pro

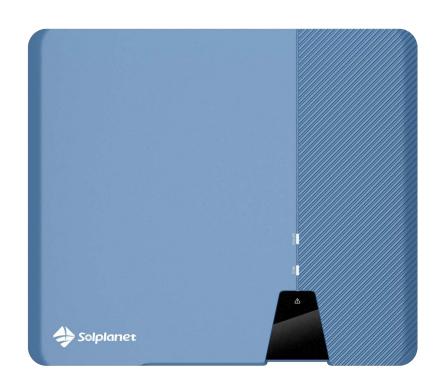



# **ASW LT-G2-Pro series inverter Table of Contents**

1	Notes on this Manual	4
	1.1 General Notes	4
	1.2 Area of Validity	4
	1.3 Target group	5
	1.4 Symbols used in this manual	5
2	Safety	7
	2.1 Intended use	7
	2.2 Important safety information	8
	2.3 Symbols on the label	9
3	Unpacking	. 11
	3.1 Scope of delivery	11
	3.2 Check for transport damage	12
4	Mounting	. 13
	4.1 Requirements for mounting	13
	4.2 Mounting the inverter	17
5	Electrical connection	. 20
	5.1 Safety	20
	5.2 Electrical Connection Panel	21
	5.3 Electrical connection diagram with a separate DC isolator	22
	5.4 AC Connection	22
	5.4.1 Conditions for the AC connection	22

	5.4.2 Grid connection	. 25
	5.4.3 Additional grounding connection	. 27
	5.5 DC connection	. 28
	5.5.1 Requirements for the DC connetion	. 28
	5.5.2 Assembling the DC connectors	. 29
	5.5.3 Disassembling the DC connectors	. 30
	5.5.4 Connecting the PV Array	. 32
	5.6 Conmunication equipment connection	. 34
	5.6.1 Mounting the WiFi or 4G Stick	. 34
	5.6.2 Connect the RS485 network cable	. 35
	5.6.3 Connect the smart meter cable	. 37
6	Communication	. 38
	6.1 System monitoring via WLAN	. 38
	6.2 Active power control with Smart meter	. 39
	6.3 Remote firmware update	. 40
	6.4 Active power control via demand response enabling device (DRE	ED)
		. 40
	6.5 Communication with the third party device	. 41
	6.6 Earth fault alarm	. 41
7	Commissioning	42
	7.1 Electrical check	. 42
	7.2 Mechanical check	. 43
	7.3 Safety code check	<b>. 4</b> 4
	7.4 Start-up	. 44

8 Display	46
8.1 Overview of the control panel	46
8.2 LED indicators	46
9 Disconnecting the inverter from voltage sources	48
10 Technical data	50
10.1 DC input data	50
10.2 AC output data	53
10.3 General data	57
10.4 Safety regulations	57
10.5 Tools and torque	59
11 Troubleshooting	61
12 Maintenance	64
12.1 Cleaning the contacts of the DC-switch	64
12.2 Cleaning the heat sink	64
13 Recycling and disposal	65
14 EU Declaration of Conformity	65
15 Warranty	66
16 Contact	66

#### 1 Notes on this Manual

#### 1.1 General Notes

ASW LT-G2-Pro series inverter is a three-phase transformerless string inverter with two independent MPPTs. It converts the direct current (DC) generated by the photovoltaic (PV) module into a three-phase alternating current (AC) and feeds it into the utility grid.

#### 1.2 Area of Validity

This manual describes the mounting, installation, commissioning and maintenance of the following inverters:

ASW3K-LT-G2-Pro

ASW4K-LT-G2-Pro

ASW5K-LT-G2-Pro

ASW6K-LT-G2-Pro

ASW8K-LT-G2-Pro

ASW10K-LT-G2-Pro

ASW12K-LT-G2-Pro

ASW13K-LT-G2-Pro

ASW15K-LT-G2-Pro

ASW17K-LT-G2-Pro

ASW20K-LT-G2-Pro

Please read this manual carefully before using this product, keep it in a convenient place and make it available at all times.

## 1.3 Target group

and regulations.

This document is for qualified electricians only, who must perform the tasks exactly as described.

All persons installing inverters must be trained and experienced in general safety which must be observed when working on electrical equipment. Installation personnel should also be familiar with local requirements, rules

Qualified persons must have the following skills:

- · Knowledge of how an inverter works and is operated
- Training in how to deal with the dangers and risks associated with installing,
   repairing and using electrical devices and installations
- Training in the installation and commissioning of electrical devices and installations
- Knowledge of the applicable laws, standards and directives
- Knowledge of and compliance with this document and all safety information.

# 1.4 Symbols used in this manual

Safety instructions will be highlighted with the following symbols:



DANGER indicates a hazardous situation which, if not be avoided, will result in death or serious injury.

# **A** WARNING

WARNING indicates a hazardous situation which, if not be avoided, can result in death or serious injury.



CAUTION indicates a hazardous situation which, if not be avoided, can result in minor or moderate injury.

#### **NOTICE**

NOTICE indicates a situation which, if not be avoided, can result in property damage.



INFORMATION that is important for a specific topic or goal, but is not safety-relevant.

# 2 Safety

#### 2.1 Intended use

- 1. ASW LT-G2-Pro series inverter converts the direct current from the PV arrays into grid-compliant alternating current.
- 2. ASW LT-G2-Pro series inverter is suitable for indoor and outdoor use.
- 3. ASW LT-G2-Pro series inverter must only be operated with PV arrays (PV modules and cabling) of protection class II in accordance with IEC 61730, application class A. Do not connect any sources of energy other than PV modules to ASW LT-G2-Pro series inverter.
- 4. PV modules with a high capacity to ground must only be used if their coupling capacity does not exceed 5.0µF.
- 5. When the PV modules are exposed to light, a DC voltage is supplied to this inverter.
- 6. When designing the PV power plants, ensure that the values comply with the permitted operating range of all components at all time.
- 7. The product must only be used in countries for which it is approved or released by AISWEI and the grid operator.
- 8. Use this product only in accordance with the information provided in this documentation and with the locally applicable standards and directives. Any other application may cause personal injury or property damage.
- 9. The type label must remain permanently attached to the product.

#### 2.2 Important safety information

# **A** DANGER

Danger to life due to electric shock when live components or cables are touched

- All work on the inverter must only be carried out by qualified personnel who have read and fully understood all safety information contained in this manual.
- Do not open the inverter.
- Children must be supervised to ensure that they do not play with the inverter.

# **A** DANGER

Danger to life due to high voltages of the PV array When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors and the live components of the inverter. Touching the DC conductors or the live components can lead to lethal electric shocks. If you disconnect the DC connectors from the inverter under load, an electric arc may occur leading to electric shock and burns.

- Do not touch non-insulated cable ends.
- Do not touch the DC conductors.
- Do not touch any live components of the inverter.
- Have the inverter mounted, installed and commissioned only by qualified persons with the appropriate skills.
- •If an error occurs, have it rectified by qualified persons only.
- •Prior to performing any work on the inverter, disconnect it from all voltage sources as described in this document (see Section 9 "Disconnecting the Inverter from Voltage Sources").

# **A** WARNING

Risk of injury due to electric shock

Touching an ungrounded PV module or array frame can cause a lethal electric shock.

 connect and ground the PV modules, array frame and electrically conductive surfaces so that there is continuous conduction.

# **A** CAUTION

Risk of burns due to hot enclosure parts Some parts of the enclosure can get hot during operation.

• During operation, do not touch any parts other than the enclosure lid of the inverter.

#### NOTICE

Damage to the inverter due to electrostatic discharge Internal components of the inverter can be irreparably damaged by electrostatic discharge.

· Ground yourself before touching any component.

## 2.3 Symbols on the label


Symbol	Explanation
•	Beware of a danger zone
	This symbol indicates that the inverter must be additionally
	grounded if additional grounding or equipotential bonding is
	required at the installation site.

	Beware of high voltage and operating current
	The inverter operates at high voltage and current. Work on the
[7]	inverter must only be carried out by skilled and authorized
	electricians.
^	Beware of hot surfaces
(((	The inverter can get hot during operation. Avoid contact during
<u></u>	operation.
	WEEE designation
	Do not dispose of the inverter together with the household
<b>₹</b>	waste but in accordance with the disposal regulations for
	electronic waste applicable at the installation site.
	CE marking
$(\epsilon)$	The product complies with the requirements of the applicable
	EU directives.
S in	Certification mark
	The product has been tested by TUV and got the quality
PV loverter	certification mark.
^	RCM Mark
	The product complies with the requirements of the applicable
ت	Australian standards.
	Capacitors discharge
A 7.	Before opening the covers, the inverter must be disconnected
	from the grid and PV array. Wait at least 5 minutes to allow the
	energy storage capacitors to fully discharge.
	Observe the documentation
	Observe all documentation supplied with the product
, ,	

# 3 Unpacking

## 3.1 Scope of delivery

Obje	Description	Quantity
Α	Inverter	1 piece
В	Wall bracket	1 piece
С	DC connector	2 pairs(3-10K), 3 pairs(12- 15K), 4 pairs(17-20K)
D	AC connector	1 piece
Е	Documentation	1 piece
F	Screw accessory	1 piece
G	4G/ WiFi Stick	1 piece
Н	Communication Cover	2 pieces

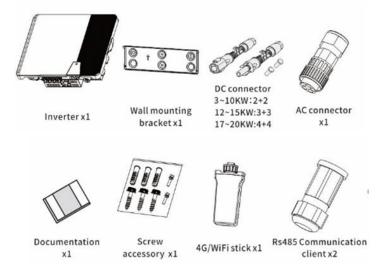

Please carefully check all the components in the carton. If anything is missing, contact your dealer at once.

## 3.2 Check for transport damage

Thoroughly inspect the packaging upon delivery. If you detect any damage to the packaging which indicates the inverter may have been damaged, inform the responsible shipping company immediately. We will be glad to assist you if required.

# 4 Mounting


## 4.1 Requirements for mounting



Danger to life due to fire or explosion


Despite careful construction, electrical devices can cause fires.

- Do not mount the inverter on flammable construction materials.
- Do not mount the inverter in areas where flammable materials are stored.
  - Do not mount the inverter in areas where there is a risk of explosion.
- Be sure that the inverter is mounted out of the reach of children.
- 2. Mount the inverter in areas where it cannot be touched inadvertently.
- 3. Ensure good access to the inverter for installation and possible service.
- 4. The ambient temperature should be below 40°C to ensure optimal operation.
- 5. Observe the minimum clearances to walls, other inverters, or objects as follows to ensure sufficient heat dissipation.

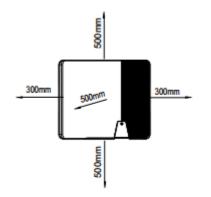


Direction	Min. clearance (mm)
above	500
below	500
sides	300

#### Clearances for one inverter

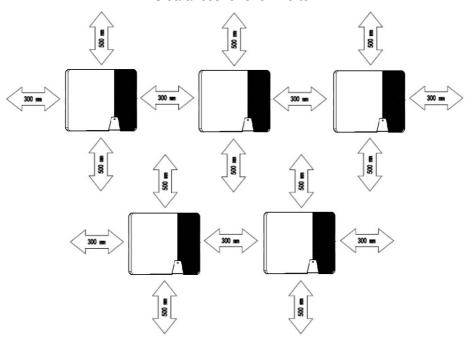


Clearances for multiple inverters


- 6. In order to avoid power reduction caused by overheating, do not mount the inverter in a location that allows long-term exposure to direct sunlight.
- 7. Ensure optimum operation and extend service life, avoid exposing the inverter to direct sunlight, rain and snow.

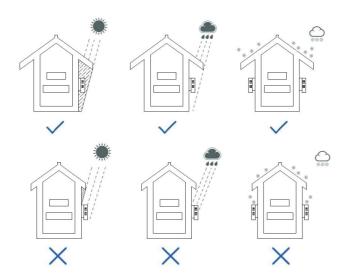

- 8. The mounting method, location and surface must be suitable for the inverter's weight and dimensions.
- 9. If mounted in a residential area, we recommend mounting the inverter on a solid surface. Plasterboard and similar materials are not recommended due to audible vibrations when in use.
- 10. Don't put any objects on the inverter. Do not cover the inverter.
- 11. Mount the inverter vertically or tilted backward by max.15°.

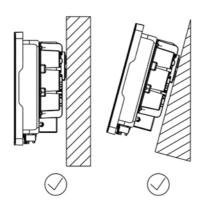

12. Never install the inverter horizontally, or with a forward tilt or with a backward tilt or even with upside down. The horizontal installation can result in damage to the inverter.

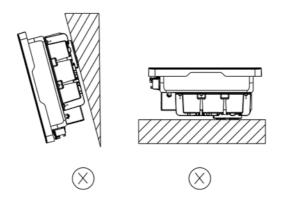

13. Mount the inverter at eye level for easy inspection.

## 4.2 Mounting the inverter

# **A** CAUTION

Risk of injury when lifting the inverter, or if it is dropped

The weight of Solplanet inverter is max. 18.6 kg. There is risk of injury if the inverter is lifted incorrectly or dropped while being transported or when attaching it to or removing it from the wall bracket.

• Transport and lift the inverter carefully.


#### Mounting procedure:



Risk of injury due to damaged cables

There may be power cables or other supply lines (e.g. gas or water) routed in the wall.

- Ensure that no lines are laid in the wall which could be damaged when drilling holes.
- 1. Use the wall bracket as a drilling template and mark the positions of the drill holes, then drill 3 holes (Φ10) to a depth about 70mm. During operation, keep the drill vertical to the wall, and hold the drill steady to avoid tilted holes.

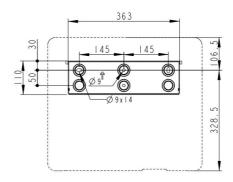


# **A** CAUTION


Risk of injury due to the product falls down

If the depth and distance of the holes is not correct, the product maybe fall down from the wall.

- •Before inserting the wall anchors, measure the depth and distance of the holes.
- 2. After cleaning the dust and other objects from the holes, place 3 wall anchors into the holes, then attach the wall bracket to the wall using the hexagon head screw delivered with the inverter.

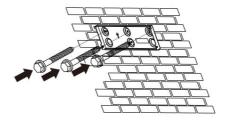


3. Hold the inverter using the handles at the corners, attach the inverter onto the wall bracket tilted slightly downwards.

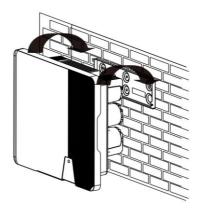

4. Check both sides of the outer fin of the inverter to ensure that it is securely in place.

5. Attach the outer fins of heat sink to both sides of the wall bracket using M4 screws. (screw driver type: PH2, torque: 1.6 Nm).

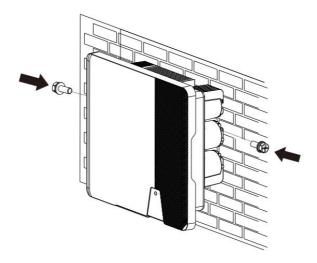

Dismante the inverter in reverse order.

#### 5 Electrical connection

#### 5.1 Safety



Danger to life due to high voltages of the PV array

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors and the live components of the inverter. Touching the DC conductors or the live components can lead to lethal electric shocks. If you disconnect the DC connectors from the inverter under load, an electric arc may occur leading to electric shock and burns.

- Do not touch non-insulated cable ends.
- · Do not touch the DC conductors.
- Do not touch any live components of the inverter.
- Have the inverter mounted, installed and commissioned only by qualified persons with the appropriate skills.
- If an error occurs, have it rectified by qualified persons only.
- Prior to performing any work on the inverter, disconnect it from all voltage sources as described in chapter 9.


# **A** WARNING

Risk of injury due to electric shock

Touching an ungrounded PV module or array frame can cause a lethal electric shock.

• connect and ground the PV modules, array frame and electrically conductive surfaces so that there is continuous conduction.


# 5.2 Electrical Connection Panel

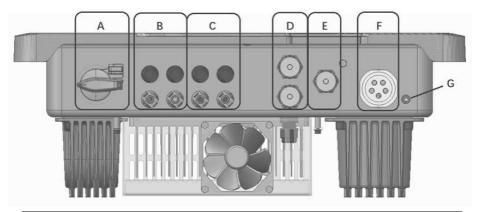

Object	Description	
Α	DC-switch	
B MPP1 connector		
	(3-10K has 1 pair of terminals, 12K-20K has 2 pairs of	
	terminals)	
С	MPP2 connector	
	(3K-15K has 1 pair of terminals, 17K-20K has 2 pairs of	
	terminals)	
D	RS485 Communication interface COM1/2	
Е	Communication Stick interface COM3	
F	AC connector	
G	Additional grounding screw	

## 5.3 Electrical connection diagram with a separate DC isolator

Local standards or codes may require that a separate DC isolator should be installed next to the inverter. The separate DC isolator must disconnect each PV string of the inverter so that the entire inverter can be removed if the inverter is faulty. We recommend the following electrical connection:

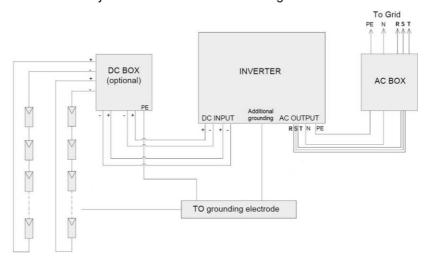


#### 5.4 AC Connection

#### 5.4.1 Conditions for the AC connection

#### **Cable Requirements**

 The grid connection is made using 5 conductors (L1, L2, L3, N, and PE). We recommend the following requirements for stranded copper conductor.



Object	Description	Value
Α	External diameter	1016 mm
В	Conductor cross-section	2.56 mm <sup>2</sup>
С	Stripping length of the insulated conductors	Approx. 13 mm
D	Stripping length of the AC cable's outer	Approx.53 mm
	sheath	Арргох.55 ппп
The PE insulated conductor must be 2 mm longer than the L and N		

The PE insulated conductor must be 2 mm longer than the L and N conductors

Larger cross-sections should be used for longer leads.

#### Cable Design

The conductor cross-section should be dimensioned to avoid power loss in cables exceeding 1% of rated output power.

The required conductor cross-section depends on the inverter rating, ambient temperature, routing method, cable type, cable losses, valid installation requirements of installation side.

#### **Residual current protection**

The product is equipped with an integrated universal current-sensitive residual current monitoring unit inside. The inverter will disconnect immediately from the mains power as soon as fault current with a value exceeding the limit.

If an external residual-current protection device is required, please install a type B residual-current protection device with a protection limit of not less than 100mA.

## Overvoltage category

The inverter can be used in grids of overvoltage category III or lower in accordance with IEC 60664-1. This means that it can be permanently

connected at the grid-connection point in a building. In installations involving long outdoor cable routing, additional measures to reduce overvoltage category IV to overvoltage category III are required.

#### AC circuit breaker

In PV systems with multiple inverters, protect each inverter with a separate circuit breaker. This will prevent residual voltage being present at the corresponding cable after disconnection.

No consumer load should be applied between AC circuit breaker and the inverter.

The selection of the AC circuit breaker rating depends on the wiring design (wire cross-section area), cable type, wiring method, ambient temperature, inverter current rating, etc. Derating of the AC circuit breaker rating may be necessary due to self-heating or if exposed to heat.

The maximum output current and the maximum output overcurrent protection of the inverters can be found in section 10 "Technical data".

#### **Grounding conductor monitoring**

The inverter is equipped with a grounding conductor monitoring device. This grounding conductor monitoring device detects when there is no grounding conductor connected and disconnects the inverter from the utility grid if this is the case. Depending on the installation site and grid configuration, it may be advisable to deactivate the grounding conductor monitoring. This is necessary, for example, in an IT system if there is no neutral conductor present and you intend to install the inverter between two line conductors. If you are uncertain about this, contact your grid operator or AISWEI.

i

Safety in accordance with IEC 62109 when the grounding

conductor monitoring is deactivated.

In order to guarantee safety in accordance with IEC 62109 when the grounding conductor monitoring is deactivated, carry out one of the following measures:

- Connect a copper-wire grounding conductor with a cross-section of at least 10 mm² to the AC connector bush insert.
- Connect an additional grounding that has at least the same cross-section as the connected grounding conductor to the AC connector bush insert.
   This prevents touch current in the event of the grounding conductor on the AC connector bush insert failing.

#### 5 4 2 Grid connection

#### Procedure:



Danger to life due to high voltages in the inverter

Touching the live components can lead to lethal electric shocks.

 
- Before performing the electrical connection, ensure that the AC circuitbreaker is switched off and cannot be reactivated.
- 1. Switch off the AC circuit breaker and secure it against reconnection.
- 2. Insert the copper wire into a suitable European style tube connector (according to DIN 46228-4) and crimp it.

## **NOTICE**


Damage to the inverter due to wrong wiring

If the phase line was connected to PE terminal, the inverter will not function properly.


- Please ensure that the type of the conductors matches the signs of the terminals on the socket element.
- 3. Insert the grounding wire (PE), neutral wire (N) and live wire (L1, L2 and L3) of the crimped European connector into the corresponding holes of the terminal block as indicated by the arrows below, and tighten the screws with a 3mm wide Allen wrench. The torque is 2.0 Nm.



 4. Push the holding buckle and the sealing plug into the screw sleeve body, and then assemble the terminal block, the screw sleeve body and the tightening nut together. First clamp the terminal block with a plastic clamp, then screw the screw sleeve body onto the terminal block, and finally tighten the tightening nut.



Insert the wired AC connector into the corresponding AC output port of the inverter and tighten it clockwise..

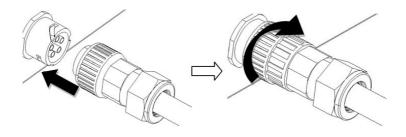


#### 5.4.3 Additional grounding connection

If additional grounding or equipotential bonding is required locally, you can connect additional grounding to the inverter. This prevents touch current if the grounding conductor on the AC connector fails.

#### Procedure:

- 1. Align the terminal lug with protective conductor.
- 2. Insert the screw through the hole located at the housing and tighten it firmly (screw driver type: PH2, torque: 2.5Nm).

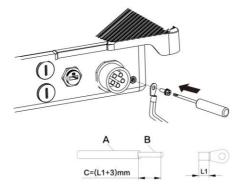

#### Grounding parts information:

Object	Explanation	
1	M5 screw	
2	M5 OT terminal	
3	Yellow-green grounding wire	

#### 5.5 DC connection

# **⚠** DANGER

Danger to life due to high voltages in the inverter

Touching the live components can lead to lethal electric shocks.

- Before connecting the PV generator, ensure that the DC-switch is switched off and that it cannot be reactivated.
- · Do not disconnect the DC connectors under load.

#### 5.5.1 Requirements for the DC connetion

Requirements for the PV modules of a string:

- •PV modules of the connected string must be the same type, Identical alignment and Identical tilt.
- The thresholds for the input voltage and the input current of the inverter must be adhered to (see Section 10.1 "Technical DC input data").
- On the coldest day based on statistical records, the open-circuit voltage of the PV array must never exceed the maximum input voltage of the inverter.
- The connection cables of the PV modules must be provided with the connectors
- The positive connection cables of the PV modules must be fitted with the positive DC connectors. The negative connection cables of the PV modules must be provided with the negative DC connectors.

# **▲** DANGER

Danger to life due to high voltages on DC conductors

When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors. Touching the DC conductors can lead to lethal electric shocks.

- Cover the PV modules.
- Do not touch the DC conductors.

Assemble the DC connectors as described below. Be sure to observe the correct polarity. The DC connectors are marked with the symbols "+" and " - ".



 
#### Cable requirements:

The cable must be of type PV1-F, UL-ZKLA or USE2 and comply with the following properties:

- External diameter: 5-8mm
- Conductor cross-section: 2.5-6mm²
- Qty single wires: minimum 7
- Nominal voltage: minimum 1100V


#### Procedure:

1. Strip about 12 mm of the cable insulation.




2. Route the stripped cable all the way into the DC connector. Ensure that

the stripped cable and the DC connector have the same polarity.

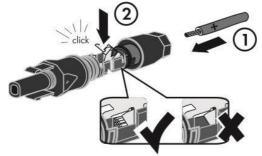

3. Push the swivel nut up to the thread and tighten the swivel nut. (SW15, Torque: 2.0Nm)

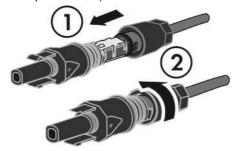

## 5.5.3 Disassembling the DC connectors

# **▲** DANGER

Danger to life due to high voltages on DC conductors When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors. Touching the DC conductors can lead to lethal electric shocks.

 
- Cover the PV modules.
- Do not touch the DC conductors.

#### Procedure:


- 1. Make sure DC power is cut off.
- 2. Unscrew the swivel nut.



3. To release the DC connector, insert a flat-blade screwdriver (blade width:3.5 mm) into the side catch mechanism and lever open.



- 4. Carefully pull the DC connector apart.
- 5. Release the clamping bracket. To do so, insert a flat-blade screwdriver (blade width: 3.5 mm) into the clamping bracket and lever it open.

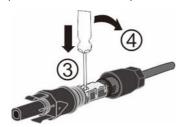

6. Remove the cable.



#### **NOTICE**


Destruction of the inverter due to overvoltage

If the voltage of the strings exceeds the maximum DC input voltage of the inverter, it can be destroyed due to overvoltage. All warranty claims become void.

- Do not connect strings with an open-circuit voltage greater than the maximum DC input voltage of the inverter.
- Check the design of the PV system

#### Procedure:

- Ensure that the individual AC circuit breaker is switched off and secure it against reconnection.
- 2. Ensure that the DC-switch is switched off and secure it against reconnection.
- 3. Ensure that there is no ground fault in the PV strings.
- 4. Check whether the DC connector has the correct polarity. If the DC connector fits with a DC cable having the wrong polarity, the DC connector must be reassembled again. The DC cable must always have the same polarity as the DC connector.
- Ensure that the open-circuit voltage of the PV strings does not exceed the maximum DC input voltage of the inverter.
- Unplug the sealing plug on the input end of the DC connector and connect
  the assembled DC connectors to the inverter until they audibly snap into
  place. Do not unplug the sealing plug from the input end of unused DC
  connector.

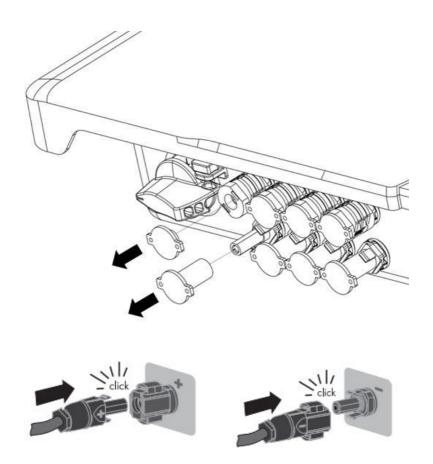

# **NOTICE**

Damage to the inverter due to moisture and dust penetration Seal the unused DC inputs with sealing plugs so that moisture and dust cannot penetrate the Inverter.

• Make sure all DC connectors are securely sealed.

## 5.6 Conmunication equipment connection

#### 5.6.1 Mounting the WiFi or 4G Stick

#### **NOTICE**


Damage to the inverter due to electrostatic discharge Internal components of the inverter can be irreparably damaged by electrostatic discharge.

• Ground yourself before touching any component.

When the system uses WiFi Stick or 4G Stick monitoring, WiFi Stick or 4G Stick should be connected to COM3 connection in section 5.2.

#### Procedure:

- 1. Take out the WiFi Stick included in the scope of delivery.
- 2. Attach the WiFi Stick to the connection port in place and tighten it into the port by hand with the nut in the stick. Make sure the stick is securely connected and the label on the modular can be seen.

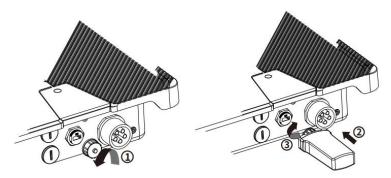



The communication stick interface COM3 is only applicable to AISWEI products and can not be connected to any other USB devices.


### **NOTICE**

The inverter can be destroyed by wrong communication wiring

- Internal components of the inverter can be irreparably damaged due to incorrect wiring between the power wire and signal wire. All the warranty claim will be invalid.
- Please check the wiring of the RJ45 connector before crimping the contact.

This inverter is equipped with RJ45 interfaces for RS485 communication. The network cable should be connected to COM1/2 connection in section 5.2.

Pinout detail of the RJ45 interface on the inverter as follows:

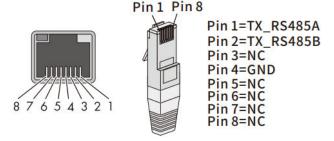

The network cable meeting the EIA/TIA 568A or 568B standard must be UV resistant if it is to be used outdoors.


#### Cable requirement:

- Shielding wire
- CAT-5E or higher
- UV-resistant for outdoor use
- RS485 cable maximum length 1000m


#### Procedure:

- 1. Take out the communication cover from the package.
- 2. Screw on the cover cap of the signal terminal according to the sequence of

the following arrows and plug the correctly connected wire into the waterproof RS485 communication client in the optional accessories.

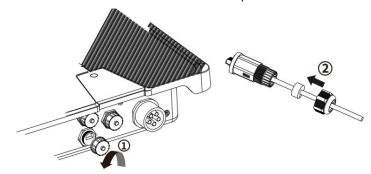

Insert the cable into the corresponding communication connector in the order of the arrow, tighten the sleeve and the forcing head screw at the tail.

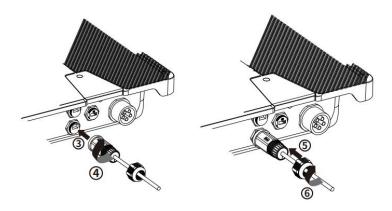

### **NOTICE**

Damage to the inverter due to moisture and dust penetration

- If the cable gland are not mounted properly, the inverter can be destroyed due to moisture and dust penetration. All the warranty claim will be invalid.
- Make sure the cable gland has been tightened firmly.

Disassemble the network cable in reverse order.


### 5.6.3 Connect the smart meter cable

If smart meter needs to be connected. Cable requirements and connecting procedure are the same as chapter 5.6.2.


# 6 Communication

# 6.1 System monitoring via WLAN

User can monitor the inverter through the external 4G/WiFi stick module. The connection diagram between the inverter and internet is shown as following two pictures, both two methods are available. Please note that each 4G/WiFi stick can only connect to 5 inverters in method1.

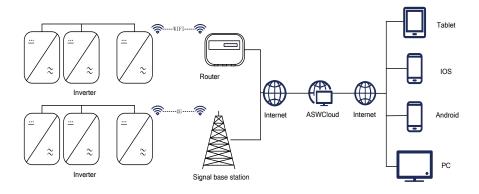

Method 1 only one inverter with the 4G/WiFi Stick, the other inverter be connected through the RS 485 cable.

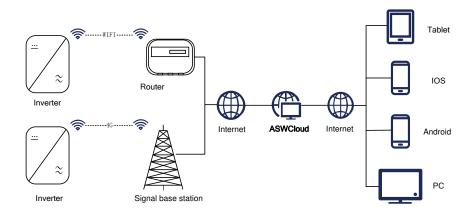


Mehod 2 every inverter with 4G/WiFi Stick, every inverter can connect to internet.

As shown above, we offer a remote monitoring platform called "AiSWEI cloud". You can also install the "AiSWEI APP" on a smart phone using Android or an iOS operating system. You can visit the website (<a href="https://solplanet.net/installer-area/#monitoring">https://solplanet.net/installer-area/#monitoring</a>) for system information. And download the user manual for the AISWEI Cloud Web or AISWEI APP.

# 6.2 Active power control with Smart meter

The inverter can control active power output via connecting smart meter, following picture is the system connection mode through WiFi stick.

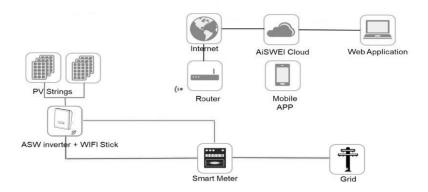

The smart meter should support the MODBUS protocol with a baud rate of 9600 and address set 1. Smart meter as above SDM630-Modbus connecting method and seting baud rate method for modbus please refer to it's user manual.

i

Possible reason of communication failure due to incorrect

#### connection

- WiFi stick only support single inverter to do active power control.
- The overall length of the cable from inverter to smart meter is 100m.

The active power limit can be set on "AiSWEI APP" application, the details can be found in the user manual for the AISWEI APP.

### 6.3 Remote firmware update

ASW LT-G2-Pro series inverters can update the firmware through 4G/WIFI stick, no need to open the cover for maintenance. For more information, please contact the Service.

# 6.4 Active power control via demand response enabling device (DRED)



DRMs application description

- Only applicable to AS/NZS4777.2:2020.
- DRM0, DRM5, DRM6, DRM7, DRM8 are available.

The inverter shall detect and initiate a response to all supported demand response commands, demand response modes are described as follows:

Mode	Requirement
DRM 0	Operate the disconnection device

DRM 1	Do not consume power
DRM 2	Do not consume at more than 50% of rated power
DRM 3	Do not consume at more than 75% of rated power AND Source
	reactive power if capable
DRM 4	Increase power consumption (subject to constraints from other
	active DRMs)
DRM 5	Do not generate power
DRM 6	Do not generate at more than 50% of rated power
DRM 7	Do not generate at more than 75% of rated power AND Sink
	reactive power if capable
DRM 8	Increase power generation (subject to constraints from other
	active DRMs)

If DRMs support is required, the inverter should be used in conjunction with AiCom. the Demand Response Enabling Device (DRED) can be conneted to the DRED port on AiCom via RS485 cable. You can vist the website www.solplanet.net for more information and download the user manual for the AiCom.

# 6.5 Communication with the third party device

Solplanet inverters can also connect with one third party device instead of RS485 or WiFi stick, the communication protocol is modbus. For more information, please contact the Service.

### 6.6 Earth fault alarm

This inverter complies with IEC 62109-2 clause 13.9 for earth fault alarm monitoring. If an Earth Fault Alarm occurs, the red color LED indicator will light up. At the same time, the error code 38 will be sent to the AISWEI Cloud. (This function is only available in Australia and New Zealand)

# 7 Commissioning

#### 7.1 Electrical check

Carry out the main electrical checks as follows:

 Check the PE connection with a multimeter: check that the inverter's exposed metal surface has a grounding connection.

# **A** WARNING

Danger to life due to the presence of DC-Voltage

Touching the live conductors can lead to lethal electric shocks.

- Only touch the insulation of the PV array cables.
- Do not touch parts of the sub-structure and frame of the PV array which isn't grouned.
  - · Wear personal protective equipment such as insulating gloves.
- ② Check the DC voltage values: make sure that the DC voltage of the strings does not exceed the permitted limits.
- ③ Check the polarity of the DC voltage: make sure the DC voltage has the correct polarity.
- 4 Check the PV generator's insulation to ground with a multimeter: make sure that insulation resistance to ground is greater than 1MOhm.



Danger to life due to the presence of AC-Voltage

Touching the live conductors can lead to lethal electric shocks.

- Only touch the insulation of the AC cables.
- Wear personal protective equipment such as insulating gloves.
- ⑤ Check the grid voltage: check that the grid voltage at the point of connection of the inverter is within the permitted range.

#### 7.2 Mechanical check

Carry out the main mechanical checks to ensure the inverter is waterproof as follows:

- ① Make sure the inverter has been correctly mounted with wall bracket.
- ② Make sure the cover has been correctly mounted.
- 3 Make sure the communication cable and AC connector have been correctly wired and tightened.

# 7.3 Safety code check

Choose suitable safety code according to the location of installation. please visit website (https://solplanet.net/installer-area/#monitoring) and download the AISWEI Cloud APP manual for detailed information, you can find the Safety Code Setting Guide in an event where an installer needs to set the country code manually.



The Solplanet's inverters comply with local safety code when leaving the factory.

# 7.4 Start-up

After finishing the electrical and mechanical checks, switch on the miniature circuit-breaker and DC-switch in turn. Once the DC input voltage is sufficiently high and the grid-connection conditions are met, the inverter will start operation automatically. Usually, there are three states during operation:

- 1) Waiting: When the initial voltage of the strings is greater than the minimum DC input voltage but lower than the start-up DC input voltage, the inverter is waiting for sufficient DC input voltage and cannot feed power into the grid.
- 2) Checking: When the initial voltage of the strings exceeds the start-up DC input voltage, the inverter will check feeding conditions at once. If there is anything wrong during checking, the inverter will switch to the "Fault" mode.
- 3) Normal: After checking, the inverter will switch to "Normal" state and feed power into the grid.

During periods of low radiation, the inverter may continuously start up and shut down. This is due to insufficient power generated by the PV array. If this fault occurs often, please call service.



If the inverter is in "Fault" mode, refer to chapter 11 "Troubleshooting".

# 8 Display

# 8.1 Overview of the control panel

The inverter is equipped with a display panel, which has 3 LED indicators.



### 8.2 LED indicators

The three LED indicators from top to bottom are:

### SOLAR power indicator

When the inverter is in the standby self-checking state, the white light flashes. Under normal grid-connected working state, the light is always on. In "Fault" mode, the light is off.

#### 2. COM communication indicator

When the inverter communicates with other devices normally, the white light flashes. If communication is abnormal or not connected, the light is off.

# A Fault indicator

The light is on when the invert is faulty or when external conditions cannot be grid-connected or when it is working improperly. When there is no fault, the light is off

# 9 Disconnecting the inverter from voltage sources

Before performing any work on the inverter, disconnect it from all voltage sources as described in this section. Always adhere strictly to the given sequence.

- 1. Disconnect AC circuit breaker and secure against reconnection.
- 2. Disconnect the DC-switch and secure against reconnection.
- Use a current probe to ensure that no current is present in the DC cables.

# **A** DANGER


Danger to life due to electric shock when touching exposed DC conductors or DC plug contacts if the DC connectors are damaged or loose

The DC connectors can break or become damaged, become free of the DC cables, or no longer be connected correctly if the DC connectors are released and disconnected incorrectly. This can result in the DC conductors or DC plug contacts being exposed. Touching live DC conductors or DC plug connectors will result in death or serious injury due to electric shock.

- Wear insulated gloves and use insulated tools when working on the DC connectors.
- Ensure that the DC connectors are in perfect condition and that none of the DC conductors or DC plug contacts are exposed.
- Carefully release and remove the DC connectors as described in the following.
- 4. Release and remove all DC connectors. Insert a flat-blade screwdriver or an angled screwdriver (blade width: 3.5 mm) into one of the slide slots and pull the DC connectors out downwards. Do not pull on the cable.



5. Release and disconnect the AC connector. Rotate the socket element counterclockwise to open.

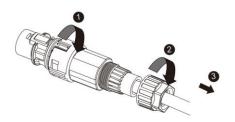

6. Wait until all LEDs and the display have gone out.

# 10 Technical data

# 10.1 DC input data

Туре	ASW3K-LT- G2-Pro	ASW4K-LT- G2-Pro	ASW5K-LT- G2-Pro	ASW6K-LT- G2-Pro
Max. PV modules power (STC)	4500W	6000W	7500W	9000W
Max. input voltage/ Rated input voltage		1100V	//630V	
MPPT voltage range		150~	1000 V	
Full load MPPT voltage range		270~	850 V	
Intitial feed-in voltage		18	0V	
Min input voltage		12	5V	
Max. DC input current		16A	/16A	
I <sub>sc</sub> PV, absolute max.		25A	/25A	
Maximum reverse current from the inverter in the system for max. 1 ms	0A			
Number of MPP trackers	2			

Strings per MPP	1/1
tracker	1/ 1
Overvoltage	
category in	II
accordance with	II II
IEC60664-1	

Туре	ASW8K-LT- G2-Pro	ASW10K-LT- G2-Pro	ASW12K- LT-G2-Pro	ASW13K- LT-G2-Pro	
Max. PV modules power (STC)	12000W	15000W	18000W	19500W	
Max. input voltage/ Rated input voltage		1100V/	630V		
MPPT voltage range	150∼1000 V				
Full load MPPT voltage range	400∼850 V				
Intitial feed-in voltage	180V				
Min input voltage		125	ίV		
Max. DC input current	20A/16A 32A/20A				
I <sub>sc</sub> PV, absolute max.	30A/25A 48A/30A				
Maximum reverse current from the	0A				

inverter in the system for max. 1 ms		
Number of MPP trackers	2	
Strings per MPP tracker	1/1	2/1
Overvoltage category in accordance with IEC60664-1	II	

Туре	ASW15K-LT- G2-Pro	ASW17K- LT-G2-Pro	ASW20K-LT- G2-Pro
Max. PV modules Power (STC)	22500W 25500W 30000W		
Max. input voltage/ Rated input voltage	1100V/630V		
MPP voltage range		150~1000 V	
Full load MPP voltage range	400~850V		
Intitial feed-in voltage	180V		
Min input voltage		125V	
Max. DC input current	32A/20A	2'	32A
I <sub>sc</sub> PV, absolute max.	48A/30A	2*	48A
Maximum reverse current from the inverter in the system for max. 1 ms	0A		

Number of MPP trackers	2		
Strings per MPP tracker	2/1	2/2	
Overvoltage category			
in accordance with		II	
IEC60664-1			

- (1) When the DC input voltage is greater than 1000V, the inverter will alarm an error.
- (2) When the DC input voltage is lower than 995V, the inverter starts self-checking.
- (3) The full-load MPP voltage range of the inverter is the value measured under the rated AC voltage. If you have any questions, please consult local service personnel.

# 10.2 AC output data

Туре	ASW 3K- LT-G2-Pro	ASW 4K- LT-G2- Pro	ASW 5K- LT-G2- Pro	ASW 6K- LT-G2- Pro
Rated output power	3000W	4000 W	5000 W	6000 W
Max. output active power	3300W	4400 W	5500 W	6600 W
Max. output apparent power	3300VA	44000 VA	5500 VA	6600VA
Rated AC Voltage (1)	3/N/PE, 220/380 V, 230/400 V,240/415 V		0/415 V	
AC voltage range		160 V~	300 V	
Rated AC Frequency (2)		50 Hz/	60 Hz	
Operating range at AC power frequency 50 Hz	45 Hz to 55Hz			
Operating range at AC power frequency 60 Hz	55 Hz to 65Hz			

Max. continuous output current	3×4.8 A	3×6.4 A	3×8.0 A	3×9.6 A
Maximum output current under fault conditions	3×14A			
Maximum output overcurrent protection		3×1	6A	
Adjustable displacement power factor	0.80 ind - 0.80 cap			
Inrush current (peak and duration)		<10A @	250us	
Harmonic distortion (THD) at the rated power	< 3%			
Night-time power loss		<1	W	
Standby power loss	<12 W			
Overvoltage category in accordance with IEC60664-1	III			

	ASW 8K-	ASW	ASW	ASW
Туре	LT-G2-Pro	10K-LT-	12K-LT-	13K-LT-
	L1-G2-P10	G2-Pro	G2-Pro	G2-Pro
Rated output power	8000W	10000 W	12000 W	13000 W
Max. output active	8800W	11000 W	13200 W	14300 W
power	00000	11000 W	13200 W	14300 W
Max. output apparent	8800VA	11000 VA	13200 VA	14300VA
power	0000 VA	11000 VA	10200 VA	1430077
Rated AC Voltage (1)	3/N/PE, 220/380 V, 230/400 V,240/415 V			0/415 V
AC voltage range		160 V~	300 V	

Rated AC Frequency (2)		50 Hz/	60 Hz	
Operating range at AC	45 Hz to 55Hz			
power frequency 50 Hz	45 HZ (0 55HZ			
Operating range at AC		55 Hz to	n 65Hz	
power frequency 60 Hz	55 Hz to 65Hz			
Max. continuous output	3×12.8 A	3×16 A	3×19.1 A	3×20.7 A
current	0×12.0 A	0×10 A	0×10.1 A	0×20.7 A
Maximum output				
current under fault	3×2	5A	3×3	33A
conditions				
Maximum output	3×3	2Δ	3×40A	
overcurrent protection	0.0		U^4U/1	
Adjustable				
displacement power		0.80 ind -	0.80 cap	
factor				
Inrush current (peak	<10A @250us			
and duration)		1071	-20000	
Harmonic distortion				
(THD) at the rated		< 3	%	
power				
Night-time power loss	<1 W			
Standby power loss	<12 W			
Overvoltage category				
in accordance with	III			
IEC60664-1				

Туре	ASW 15K-LT-	ASW 17K-LT-	ASW 20K-
	G2-Pro	G2-Pro	LT-G2-Pro
Rated output power	15000 W	17000 W	20000 W

Max. output active power	16500 W	18700 W	22000W
Max. output apparent power	16500VA	18700VA	22000VA
Rated AC Voltage (1)	3/N/PE, 220	/380 V, 230/400 \	/,240/415 V
AC voltage range		160 V~300 V	
Rated AC Frequency (2)		50 Hz/ 60 Hz	
Operating range at AC power frequency 50 Hz		45 Hz to 55Hz	
Operating range at AC power frequency 60 Hz		55 Hz to 65Hz	
Max. continuous output current	3×24A 3×27.1 A 3×31.9 A		3×31.9 A
Maximum output current under fault conditions	3×33A	3:	×46A
Maximum output overcurrent protection	3×40A 3×60A		
Adjustable displacement power factor	0.80 ind - 0.80 cap		
Inrush current (peak and duration)		<10A @250us	
Harmonic distortion (THD) at the rated power	< 3%		
Night-time power loss		<1 W	
Standby power loss		<12 W	
Overvoltage category in accordance with IEC60664-1	III		

- (1) The AC voltage range depends on the local safety standards and rules.
- (2) The AC frequency range depends on the local safety standards and rules.

# 10.3 General data

_	ASW 3K-	ASW 12K-	ASW	
Туре	10K-LT-G2-	15K-LT-G2-	17/20K-LT-	
	Pro	Pro	G2-Pro	
Net weight	16 KG	17.3 KG	18.6KG	
Dimensions(L×W×D)	5	03×435×183 mr	n	
Mounting environment	In	door and Outdo	or	
Mounting recommendation		Wall bracket		
Operating temperature range		-25+60°C		
Max. permissible value for relative humidity ( non-condensing )		100%		
Max. operating altitude above mean sea level	3000m			
Ingress protection	IP65 according to IEC60529			
Climatic category	4K4H			
Protection class	I ac	I according to IEC 62103		
Topology		Transformerless		
Feed-in phases	3			
Cooling concept Natural convection Active cooling		cooling		
Display				
Communication interfaces	WiFi/4G/RS485(optional)			
Radio technology	WL	.AN 802.11 b / g	/ n	
Radio spectrum	WLAN 2.4 GHz with 2412MHz – 2472MHz band		z – 2472MHz	
Antenna gain	2dB			

# 10.4 Safety regulations

Туре	ASW LT-G2-Pro Series inverter
Internal overvoltage protection	Integrated
DC insulation monitoring	Integrated
DC injection monitoring	Integrated
Grid monitoring	Integrated
Residual current monitoring	Integrated
Islanding protection	Integrated (Three-phase monitoring)
EMC immunity	EN61000-6-1 EN61000-6-2
EMC emission	EN61000-6-3 EN61000-6-4
Utility interference	EN61000-3-2, EN61000-3-3 EN61000-3-11, EN61000-3-12

# 10.5 Tools and torque

Tools and torque required for installation and electrical connections.

Torque screwdriver, T25  Torque screwdriver, Screws for the cover  Torque screwdriver, Screws for wall bracket Screw for second grounding  Flat-head screwdriver, blade with 3.5mm  Torque screwdriver, PH2 Grounding connection  Flat-head screwdriver, PH2 Grounding connection  Flat-head screwdriver, Smart meter connector  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of Swivel nut of M25 cable Hand-tight  1.6Nm  Torque screwdriver, Smart meter connector  / Stick Hand-tight  Socke Open end of Swivel nut of sunclix gland  wrenc Open end of Swivel nut of sunclix connector  Wire stripper Peel cable jackets  / Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Multimeter Check electrical connection  Mark the positions of drill holes	Tools, n	nodel	Object	Torque
Torque screwdriver, T20 Screws for wall bracket Screw for second grounding  Flat-head screwdriver, blade with 3.5mm  Torque screwdriver, PH2 grounding connection  Cross head  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of t 33 gland wrenc Open end of h 15 connector  Wire stripper Peel cable jackets / Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables / Marker Mark the positions of drill /	Torque screwdriver,		Screws for the cover	3.0 Nm
Flat-head screwdriver, blade with 3.5mm  Torque screwdriver, PH2 grounding connection  Cross head  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of the gland wrenc Open end of holes  Wire stripper Peel cable jackets / Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Check electrical connection / Marker  Municipal DC connector / 1.6Nm  / Hand-tight / 1.6Nm  // Stick Hand-tight / 1.6Nm  // Stick Hand-tight / 1.6Nm  // Swivel nut of M25 cable Hand-tight / 2.0Nm  // Cable cutter Cut power cables / 1.6Nm  // Check electrical connection / Marker Mark the positions of drill / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Sunction DC connector / 1.6Nm  // Strew for second protector / 1.6Nm  // Stre	T25			
Flat-head screwdriver, blade with 3.5mm  Torque screwdriver, PH2 grounding connection  Flat-head screwdriver, PH2 grounding connection  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of Swivel nut of M25 cable Hand-tight  t 33 gland  wrenc Open end of Swivel nut of sunclix connector  Wire stripper Peel cable jackets  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Marker Mark the positions of drill /	Torque	screwdriver,	Screws for wall bracket	1.6Nm
Flat-head screwdriver, blade with 3.5mm  Torque screwdriver, PH2 grounding connection  Cross head  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of t gland  wrenc Open end of 15 wivel nut of M25 cable to 33 gland  wrenc Open end of 15 connector  Wire stripper Peel cable jackets  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Marker Mark the positions of drill  / Screw for second protective 1.6Nm  / Drill holes cable  / Drill holes on the wall  / Mark the positions of drill  / Mark the positions of drill	T20		Screw for second	
blade with 3.5mm  Torque screwdriver, PH2 grounding connection  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of t gland wrenc Open end of 15 connector  Wire stripper Peel cable jackets  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Marker Mark the positions of drill  1.6Nm  1.			grounding	
Torque screwdriver, PH2 grounding connection  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of t gland  wrenc Open end of h 15 connector  Wire stripper Peel cable jackets  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Marker Mark the positions of drill  1.6Nm  1.6	Flat-hea	ad screwdriver,	Sunclix DC connector	/
PH2 Cross head  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of t gland wrenc Open end of holes  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Marker Mark the positions of drill  / Smart meter connector  / Hand-tight  Hand-tight  Hand-tight  Hand-tight  Hand-tight  Hand-tight  Hand-tight  Hand-tight  Connector  Peel cable jackets  / Crimping tools  / Drill holes on the wall  / Marker Cut power cables  / Mark the positions of drill  / Marker	blade w	ith 3.5mm		
Cross head  Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of Swivel nut of M25 cable gland  wrenc Open end of Swivel nut of sunclix connector  Wire stripper Peel cable jackets  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Multimeter Check electrical connection  / Mark the positions of drill	Torque	screwdriver,	Screw for second protective	1.6Nm
Flat-head screwdriver, blade 0.4×2.5  / Stick Hand-tight  Socke Open end of gland wrenc Open end of 15 Swivel nut of Sunclix connector  Wire stripper Peel cable jackets  Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables /  Marker Mark the positions of drill /	PH2		grounding connection	
blade 0.4×2.5  / Stick Hand-tight  Socke Open end of gland wrenc Open end of 15 Swivel nut of M25 cable Hand-tight  t 33 gland wrenc Open end of Swivel nut of sunclix 2.0Nm  h 15 connector  Wire stripper Peel cable jackets /  Crimping tools Crimp power cables /  Hammer drill, Drill holes on the wall /  drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables /  Multimeter Check electrical connection /  Marker Mark the positions of drill /	Cross h	ead		
Stick Hand-tight  Socke Open end of Swivel nut of M25 cable Hand-tight  t 33 gland  wrenc Open end of Swivel nut of sunclix 2.0Nm  h 15 connector  Wire stripper Peel cable jackets /  Crimping tools Crimp power cables /  Hammer drill, Drill holes on the wall /  drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables /  Multimeter Check electrical connection /  Marker Mark the positions of drill /	Flat-hea	ad screwdriver,	Smart meter connector	/
Socke Open end of Swivel nut of M25 cable Hand-tight t 33 gland wrenc Open end of Swivel nut of sunclix 2.0Nm h 15 connector  Wire stripper Peel cable jackets / Crimping tools Crimp power cables / Hammer drill, Drill holes on the wall / drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables / Multimeter Check electrical connection / Marker Mark the positions of drill /	blade 0.	4×2.5		
t 33 gland wrenc Open end of Swivel nut of sunclix 2.0Nm h 15 connector  Wire stripper Peel cable jackets / Crimping tools Crimp power cables / Hammer drill, Drill holes on the wall / drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables / Multimeter Check electrical connection / Marker Mark the positions of drill /	/		Stick	Hand-tight
wrenc   Open end of   Swivel nut of sunclix   2.0Nm  Wire stripper   Peel cable jackets   /  Crimping tools   Crimp power cables   /  Hammer drill,   Drill holes on the wall   /  drill bit of Ø10  Rubber mallet   Hammer wall plugs into   holes  Cable cutter   Cut power cables   /  Multimeter   Check electrical connection   /  Marker   Mark the positions of drill   /	Socke	Open end of	Swivel nut of M25 cable	Hand-tight
h 15 connector  Wire stripper Peel cable jackets / Crimping tools Crimp power cables / Hammer drill, Drill holes on the wall / drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables / Multimeter Check electrical connection / Marker Mark the positions of drill /	t	33	gland	
Wire stripper Peel cable jackets / Crimping tools Crimp power cables / Hammer drill, Drill holes on the wall / drill bit of Ø10 Rubber mallet Hammer wall plugs into holes Cable cutter Cut power cables / Multimeter Check electrical connection / Marker Mark the positions of drill /	wrenc	Open end of	Swivel nut of sunclix	2.0Nm
Crimping tools Crimp power cables  Hammer drill, drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables  Multimeter Check electrical connection  Marker  Mark the positions of drill  /	h	15	connector	
Hammer drill, drill bit of Ø10  Rubber mallet  Hammer wall plugs into holes  Cable cutter  Cut power cables  Multimeter  Check electrical connection  Marker  Mark the positions of drill  /	Wire str	ipper	Peel cable jackets	/
drill bit of Ø10  Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables /  Multimeter Check electrical connection /  Marker Mark the positions of drill /	Crimpin	g tools	Crimp power cables	/
Rubber mallet Hammer wall plugs into holes  Cable cutter Cut power cables /  Multimeter Check electrical connection /  Marker Mark the positions of drill /	Hamme	r drill,	Drill holes on the wall	/
holes  Cable cutter  Cut power cables  / Multimeter  Check electrical connection  Marker  Mark the positions of drill  /	drill bit o	of Ø10		
Cable cutter Cut power cables / Multimeter Check electrical connection / Marker Mark the positions of drill /	Rubber mallet		Hammer wall plugs into	/
Multimeter Check electrical connection / Marker Mark the positions of drill /			holes	
Marker Mark the positions of drill /	Cable cutter		Cut power cables	/
	Multimeter		Check electrical connection	/
	Marker		Mark the positions of drill	/

ESD glove	Wear ESD glove when	/
	opening the inverter	
Safety goggle	Wear safety goggle during	/
	drilling holes.	
Anti-dust respirator	Wear anti-dust respirator	/
	during drilling holes.	

# 11 Troubleshooting

When the PV system does not operate normally, we recommend the following solutions for quick troubleshooting. If an error occurs, the red LED will light up. There will have "Event Messages" display in the monitor tools. The corresponding corrective measures are as follows:

Object	Error code	Corrective measures
	E33	Check the grid frequency and observe how often major fluctuations occur.  If this fault is caused by frequent fluctuations, try to modify the operating parameters after informing the grid operator first.
Presumable Fault	E34	Check the grid voltage and grid connection on inverter.  Check the grid voltage at the point of connection of inverter.  If the grid voltage is outside the permissible range due to local grid conditions, try to modify the values of the monitored operational limits after informing the electric utility company first.  If the grid voltage lies within the permitted range and this fault still occurs, please call service.
	E35	<ul> <li>Check the fuse and the triggering of the circuit breaker in the distribution box.</li> <li>Check the grid voltage, grid usability.</li> <li>Check the AC cable, grid connection on the inverter.</li> <li>If this fault is still being shown, contact the service.</li> <li>Make sure the grounding connection of the inverter is reliable.</li> </ul>
	E36	is reliable.  •Make a visual inspection of all PV cables and

		modules.
		If this fault is still shown, contact the service.
		Check the open-circuit voltages of the strings and
		make sure it is below the maximum DC input voltage
	E37	of the inverter.
		If the input voltage lies within the permitted range
		and the fault still occurs, please call service.
Presumable		Check the PV array's insulation to ground and
Fault		make sure that the insulation resistance to ground is
		greater than 1 MOhm. Otherwise, make a visual
	E38	inspection of all PV cables and modules.
		Make sure the grounding connection of the inverter
		is reliable.
		If this fault occurs often, contact the service.
		Check whether the airflow to the heat sink is
	E40	obstructed.
		Check whether the ambient temperature around the
		inverter is too high.
		Check whether the open circuit voltage of each
		photovoltaic group is ≥1020V.
	E46	If the open circuit voltage of each pv group is less
		than 995V and this fault still exists, please contact
		the service personnel.
		Check whether the electric supply is abnormal.
	E48	If the electric supply is normal and this fault still
		exists, please contact the service personnel.
	E56	Disconnect the inverter from the grid and the PV
	E57	array and reconnect after 3 minutes.
	E58	If this fault is still being shown, contact the service.
	E61	Check the DRED device communication or
	E62	operation.
	E65	Make sure the grounding connection of the inverter

		is reliable.
		If this fault occurs often, contact the service.
	E01	Disconnect the inverter from the utility grid and the
Permanent	E03	PV array and reconnect it after LED turn off.
Fault	E05	If this fault is still being displayed, contact the
	E07	service.
Permanent	E08	
Fault	E10	

Warning code	Warning message
31	PV1 input over voltage
32	PV2 input over voltage
34	PV1 input over current-software
35	PV1 input over current-hardware
36	PV2 input over current-software
37	PV2 input over current-hardware
40	BUS over voltage-software
42	BUS voltage unbalance (for three phase inverter)
44	Grid voltage over instant
45	Output over current-software
46	Output over current-hardware
47	Anti-islanding
150	PV1-SPD Fault
156	Inter Fan abnormal
157	External Fan abnormal
163	GFCI Redundancy check
166	CPU self-testregister abnormal
167	CPU self-testRAM abnormal
174	Low Air Temperature

### 12 Maintenance

Normally, the inverter needs no maintenance or calibration. Regularly inspect the inverter and the cables for visible damage. Disconnect the inverter from all power sources before cleaning. Clean the housing, cover and display with a soft cloth. Ensure the heatsink at the rear of the inverter cover is not covered.

### 12.1 Cleaning the contacts of the DC-switch

Clean the contacts of the DC-switch once per year. Perform cleaning by cycling the switch to ON/OFF positions 5 times. The DC-switch is located at the lower left of the housing.

# 12.2 Cleaning the heat sink



Risk injury due to hot heat sink

The heat sink may exceed 70°C during operation.

- Do not touch the heatsink during operation.
- Wait approx. 30 minutes before cleaning until the heatsink has cooled

An external fan is installed at the bottom of the inverter. When the fan fails to work normally, the inverter cannot effectively dissipate heat, and the load drops or the machine may even shut down. At this time, the fan needs to be cleaned or replaced.

Clean the heat sink with pressurized air or a soft brush. Do not use aggressive chemicals, cleaning solvents or strong detergents.

For proper function and long service life, ensure free air circulation around the heatsink.

# 13 Recycling and disposal

Dispose of the packaging and replaced parts according to the rules at the installation site where the device is installed.





Do not dispose of the product together with the household waste but in accordance with the disposal regulations for electronic waste applicable at the installation site.

# 14 EU Declaration of Conformity

within the scope of the EU directives

 Electromagnetic compatibility 2014/30/EU (L 96/79-106, March 29,2014) (EMC).



- Low Voltage Directive 2014/35/EU.(L 96/357-374, March 29, 2014)(LVD).
- Radio Equipment Directive 2014/53/EU (L 153/62-106. May 22. 2014) (RED)
   AISWEI New Energy Technology (Jiangsu) Co., Ltd. confirms herewith that the inverters described in this document are in compliance with the fundamental requirements and other relevant provisions of the above mentioned directives.

The entire EU Declaration of Conformity can be found at http://www.solplanet.net.

# 15 Warranty

The factory warranty card is enclosed with the package, please keep well the factory warranty card. Warranty terms and conditions can be downloaded at http://www.solplanet.net, if required.

When the customer needs warranty service during the warranty period, the customer must provide a copy of the invoice, factory warranty card, and ensure the type label of the inverter is legible. If these conditions are not met, AISWEI has the right to refuse to provide with the relevant warranty service.

### 16 Contact

If you have any technical problems concerning our products, please contact Aiswei service. We require the following information in order to provide you with the necessary assistance:

- · Inverter device type
- Inverter serial number
- Type and number of connected PV modules
- Error code
- Mounting location
- Warranty card

AISWEI Technology (Shanghai) Co., Ltd.

Hotline: +86 400 801 9996 (Mainland)

+886 809 089 212 (Taiwan)

Service email: service.china@aiswei-tech.com

Web: https://solplanet.net/contact-us/

Add.: Room 905B, 757 Mengzi Road, Huangpu District,

Shanghai,200023,China

AISWEI Pty Ltd.

Hotline: +61 390 988 673

Service email: service.au@aiswei-tech.com

Add.: Level 40, 140 William Street, Melbourne VIC 3000, Australia

AISWEI B.V.

Hotline: +31 208 004 844 (Netherlands)

+48 134 926 109 (Poland)

Service email: service.eu@aiswei-tech.com

Add.: Muiderstraat 9/G, Amsterdam 1011 PZ, the Netherlands

Rest of the world

Service email: service.row@aiswei-tech.com

